



SW-BCD-94
universal indicator with serial and parallel input
4 strobe inputs; 16 data inputs
RS-485 / Modbus RTU
SLAVE
choice of number of strobe inputs and strobe signal type
choice of input and displayed data type
display brightness adjustable in 8 steps
free configuration software 5 Config

The **SW-BCD-94** indicator can be used as the indicator output for PLCs to display data in the binary, bcd or byte format or to show typical information transmitted over the RS-485 interface.

 $Depending on the \, parameter \, settings, the \, indicator \, can \, display:$ 

- digits (0 9), with programmable decimal point,
- binary data (0 9, A F), showing the statuses of e.g. the address lines, data lines, etc.
- various messages and text which can be created on the 7-segment digital displays.

 $The \ meter \ can be \ configured \ with \ the \ local \ keyboard \ or \ free \ S-Config \ software \ via \ the \ RS-485 \ communication \ port.$ 


## **TECHNICAL DATA**


Power supply	19V ÷ 50V DC; 16V ÷ 35V AC or 85 ÷ 260V AC/DC, all separated
Power consumption	for 85 ÷ 260V AC/DC and 16V ÷ 35V AC power supply: max. 4,5 VA for 19V ÷ 50V DC power supply: max. 4,5 W
Display	LED, 4 x 20 mm, red (green - on request), with 8-step adjustment of brighness
Displayed values	4 digits (-999 ÷ 9999 plus decimal point) or any of character indication in range of 7-segments display
Parallel inputs	4 strobe inputs; 16 data inputs (4 decades, 4 bits/decade)
Strobe pulse width	min. 100 ms
Input levels	low: 0 V ÷ 2 V; high: 4 V ÷ 24 V
Power supply output	24V DC +5%, -10% / max. 100 mA, stabilized
Communication interface	RS-485, Modbus RTU (not galvanically isolated)
Transmission speed	adjustable in range from 1200 to 115200 bit/sek.
Transmission parameters	8N1 and 8N2
Operating temp.	0°C ÷ +50°C (standard), -20°C ÷ +50°C (option)
Storage temp.	-10°C ÷ +70°C (standard), -20°C ÷ +70°C (depending on option)
Protection class	IP 65 (front), available additional frame IP 65 for panel cut-out sealing; IP 20 (case and connection clips)
Case	panel mounting; material: NORYL - GFN2S E1
Dimensions	<u>case (WxHxD)</u> : 96 x 48 x 100 mm
	panel cut-out dimensions: 90,5 x 43 mm installation depth: min. 102 mm
	board thickness: standard 7 mm or other depending on used board thickness brackets (see Accessories)
Weight	210 g max.




# Serial displays

#### DIMENSIONS

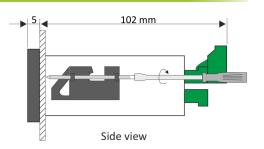


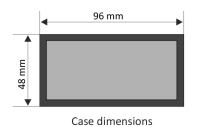

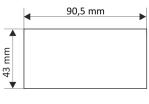

Panel cut-out dimensions

## **EXAMPLARY PIN ASSIGNMENTS**

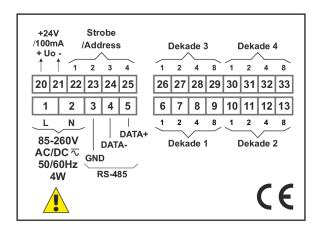

## ORDERING

### SW-BCD-94-A700-1-X-XX1

options:
00 : no options

**01** : IP 65 frame

**08**: operating temp.  $-20^{\circ}\text{C} \div +50^{\circ}\text{C}$ 


**OP**: IP 65 frame + operating temp.  $-20^{\circ}\text{C} \div +50^{\circ}\text{C}$ 

power supply:

3:24V AC/DC


4:85V - 260V AC/DC

### MOUNTING PLATES

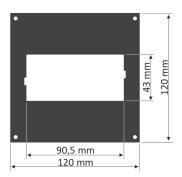

SMP-99/94

to mount 96 x 48 mm size unit in place of 96 x 96 mm cut-out

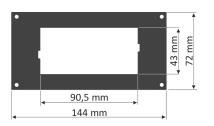

SMP-147/94

to mount 96 x 48 mm size unit in place of 144 x 72 mm cut-out

#### **BOARD THICKNESS BRACKETS / ADAPTORS**



#### **SPH-07**

1 ÷ 7 mm board thickness brackets (2 pcs) standard included with device



#### SPH-45

 $1 \div 45$  mm board thickness brackets (2 pcs)



#### SPH-05

1 ÷ 5 mm board thickness brackets (2 pcs)



### SRH-94

brackets for mounting devices on DIN 35/7.5 or 15 rail (2 pcs)

#### SOFTWARE



**S-Config 2** is used for the simultaneous detection of devices in multiple Modbus RTU networks and allows user to change the configuration of most of them. For each detected device a list of its registers, which the user can modify, is displayed and also additional informations about device parameters (type, address in the network, etc.).

S-Config software can be downloaded from SIMEX website at www.simex.pl



**SimCorder Soft** is a visualisation application created to facilitate work with advanced networks of the SIMEX devices, for acquisition, visualisation, reporting, archiving, exporting and printing of measurement data from all network devices. You can download measurements from the devices automatically or on demand. There is a possibility of immediate notification about emergency states via SMS or e-mail, which will often allow to quickly resolve an arising problem while avoiding long and expensive stoppages. You can view the measurement data, emergency states and configuration via the internet at every time.

#### **CONVERTERS**



The **SRS-U4** module is designed to connect a USB host to slave devices equipped with RS-485 interface. The PC with special software can be used as a host. The **SRS-U4** unit guarantees full galvanic isolation between USB and RS-485 circuits. The converter can work with any devices equipped with RS-485 interface and contains integrated circuit which supports USB 1.1 and USB 2.0 standards. The main purpose is connection of PC host computer with industrial data acquisition and visualisation systems based on RS-485 interface.

The SRS-U4 can be also manufactured with DIN mounting adaptor.

